


Remaks:

- 1. This is just a setting plan showing the install position.
- 2.If there is a wall in front of the benches, keep 8 meters from it.
- 3. There are no distance requirements for installing on a path.
- 4. Please consider the water-proof and drainage condition.
- 5. Please pre-bury PVC pipe for wire connection.

| Name | 10t split-type Brake Tester(with loading)-Indicate Drawing | | | | | | | | |
|---------|--|-----------|---|------------|---|---|----|---|---|
| Date | | Departmen | t | DWG Number | | | | | |
| Scale | | Desginer | | | | | | | |
| Drawing | | Inspector | | Editio | A | В | С | D | E |
| Company | Shanghai JEVOL [®] | | | Unit | | r | nm | | |

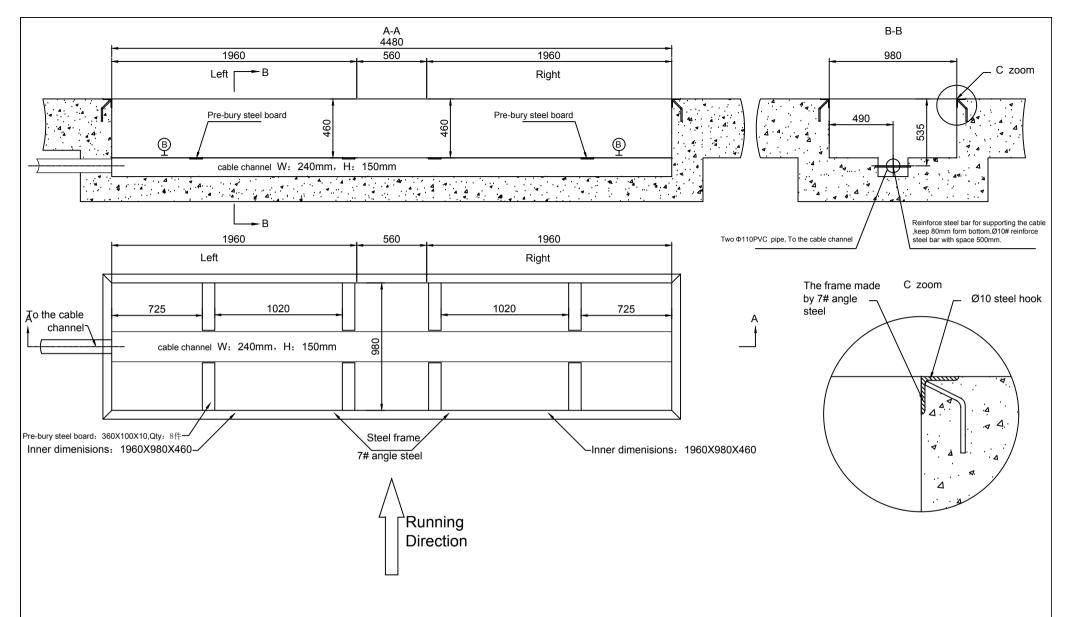

Installation requirements:

- 1. The bottom of the pit should be smooth. The lever error must be less than 2mm, the vertical error less than 2mm; and the diagonal error less than 3mm.
- 2. When the loading is more than 10T, the slab thickness should be \geq 500mm, and concrete intensity must be higher than 50MPA.
- 3. Considering the water proof and drainage according to the situation.
- 4. The steel frame should be smooth, stable. The concrete hook should be welted with the frame.
- 5. The pipe should be clean and it's better to put iron wire in it to guide the cable.

| Name | 10t Brake Tester(with loading)-Indicate Drawing | | | | | | | |
|---------|---|-----------|---|------------|-----------|--|--|--|
| Date | 2018-09-05 | Departmen | t | DWG Number | | | | |
| Scale | 1:30 | Desginer | | | | | | |
| Drawing | | Inspector | | Editio | A B C D E | | | |
| Company | Shanghai JEVOL [®] | | | Unit | mm | | | |

